

Mighty Mouse Bluetooth

The Mighty Mouse Bluetooth is a Bluetooth wireless water-resistant and contaminant free mouse. This optical mouse is water-resistant (IP68 compliant) and great for medical, industrial, marine applications or any environment where dust, moisture or liquid is a concern. In addition to the left and right click buttons, it has three buttons in the middle, which simulate a scroll wheel. Mighty Mouse Bluetooth is based on wireless Bluetooth HID profile. It can be used with PCs, Laptops, Tablet PCs, PDAs and Smartphones with built in Bluetooth HID profile, or via USB Bluetooth bridge with driver (Bridge with driver sold separately).

Weight:

4.75 ounces

Dimensions:

5.2" x 2.5" x 1.4"

Operating Frequency:

2.4 GHz

Warranty period:

One-year limited warranty

System requirements:

Built in Bluetooth HID profile or USB interface for wireless bridge with driver.

Power:

3 volts (5 volts to charge)

Rechargeable Lithium-ion battery.

Charging Cable included.

THE MOUSE MUST BE CHARGED FOR AT LEAST TWO HOURS BEFORE 1ST USE

Pairing the Mighty Mouse Bluetooth:

For Built in Bluetooth HID PCs, Laptops, Tablet PCs and PDAs:

1. Turn on the mouse by pressing the Power Button for three seconds (See the picture on the right). Green light indicates mouse is on.
2. Press the scroll up and down buttons together to enable mouse pairing mode. Blue light blinks when the mouse is in pairing mode.
3. Open the Bluetooth manager software on your PC, Laptop or PDA and follow the instruction to pair the mouse.
4. When pairing is complete the blue light stops blinking. The mouse is now ready for use.

Using a USB Bluetooth Bridge: (Bridge with driver sold separately)

1. Turn on the mouse by pressing the Power Button for three seconds (See the picture on the right). Green light indicates mouse is on.
2. Press the scroll up and down buttons together to enable mouse pairing mode. Blue light blinks when the mouse is in pairing mode.
3. Connect your USB Bluetooth bridge to the USB port on your PC.
4. Open the Bluetooth manager software for the bridge and follow the instruction to pair the mouse.
5. When pairing is complete, the blue light stops blinking. The mouse is now ready for use.

Battery status light:


- Green light indicates battery power on.
- Blinking blue light indicates pairing mode.
- Red light indicates charging.
- Blinking yellow light indicates low battery.

Cleaning Instructions:

- Clean the mouse surface by wiping, brushing, spraying or dipping it. Use only rags, sponges or soft bristle brushes.
- The rubber can be cleaned with water, soap, alcohol, 10% bleach solutions, and a variety of chemical disinfectants.
DO NOT use petroleum based cleaners, acetone, over 10% bleach solutions, temperature or pressure sterilization, buffing pads or scrubbing pads

Charging the mouse:

- To charge the mouse, plug the charger cable to the charging port shown below. It takes approximately 2 hours to fully charge the battery.

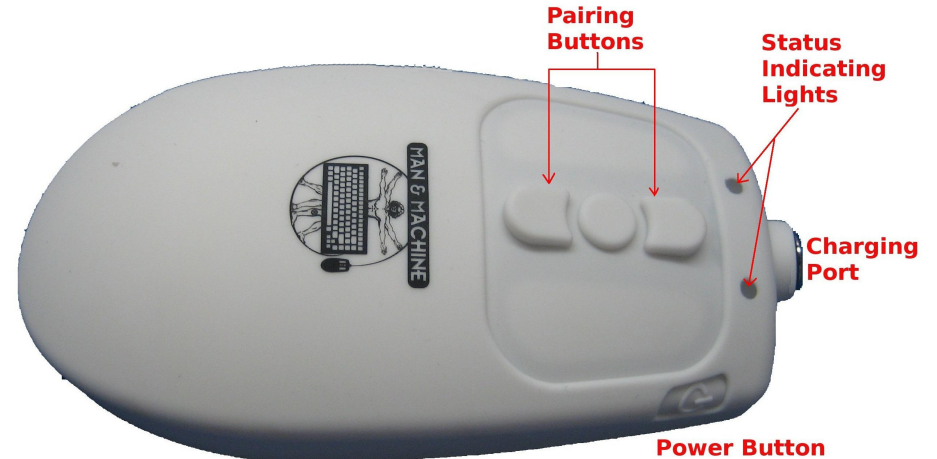

THESE INSTRUCTIONS AND RECOMMENDATIONS HAVE BEEN PREPARED TO ADVISE THE PROPER METHODS FOR CLEANING YOUR PRODUCT. MAN & MACHINE, INC. OR THE LOCAL DISTRIBUTOR CANNOT ASSUME ANY RESPONSIBILITY FOR THE APPLICATION OF THEM. IF THERE ARE ANY QUESTIONS, PLEASE CONTACT PLACE OF PURCHASE OR MMI PRIOR TO CLEANING. MAN & MACHINE DOES NOT CONSIDER THE MIGHTY MOUSE BLUETOOTH MOUSE TO BE A MEDICAL MOUSE FOR INFECTION CONTROL PURPOSES DUE TO THE INABILITY TO MECHANICALLY CLEAN ALL SURFACES AND AREAS ON THE MOUSE. ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

You can email us at: info@mmimd.com

or call us at: (301) 341-4900

In Europe, contact +31-23-5450185

www.man-machine.com

Copyright Man & Machine, Inc. 2010

