

Really Hot Tooth Keyboard

The Really Hot Tooth is a Bluetooth wireless water-resistant and contaminant free keyboard with full tactile feedback. The sealed and rigid surface is ideal for industrial, marine, and medical use, as well as other applications where moisture, cleaning, and durability are a consideration. Because the Really Hot Tooth is also quieter than "standard" keyboards, they are great for applications where noise generated from "key-clicks" is a problem. Really Hot Tooth is based on the wireless Bluetooth HID profile. It can be used with PCs, Laptops, Tablet PCs, PDAs and Smartphones with built in Bluetooth HID profile, or via USB Bluetooth bridge with appropriate driver (Bridge with driver sold separately).

Weight:

817g (1.8 lb.)

Dimensions:

381 x140 x 15.3 mm
(15.0" x 5.5" x 0.6")

Number of keys:

107 keys US layout

Operating Frequency:

2.4 GHz

Warranty period:

One-year limited warranty

System requirements:

Built in Bluetooth HID profile or USB interface for wireless bridge with appropriate driver.

Power:

3 volts (5 volts to charge)
Rechargeable Lithium-ion battery.
Charging Cable included. The keyboard turns itself off if it is not used for more than three minutes.

KEYBOARD MUST BE CHARGED FOR AT LEAST TWO HOURS BEFORE 1ST USE

Pairing the Really Hot Tooth Keyboard:

For Built in Bluetooth HID PCs, Laptops, Tablet PCs and PDAs:

1. Turn on the keyboard by pressing the Power Button for two seconds (See picture on the right). Green light indicates keyboard is on.
2. Press the Pairing Button on the keyboard to enable keyboard pairing mode. Blue light blinks when the keyboard is in pairing mode.
3. Open the Bluetooth manager on your PC, Laptop or PDA and follow the instruction for the software to pair the keyboard.
4. When pairing is complete, the blue light stops blinking and it becomes solid green. The keyboard is now ready for use.

Using a USB Bluetooth Bridge: (Bridge with driver sold separately)

1. Turn on the keyboard by pressing the Power Button for two seconds (See picture on the right). Green light indicates keyboard is on.
2. Press the Pairing Button on the keyboard to enable keyboard pairing mode. Blue light blinks when the keyboard is in pairing mode.
3. Connect your USB Bluetooth bridge to the USB port on your PC.
4. Open the Bluetooth manager software for the bridge and follow the instruction for the software to pair the keyboard.
5. When pairing is complete, the blue light stops blinking and it becomes solid green. The keyboard is now ready for use.

Battery status light:


- Green light for three seconds indicates power on.
- Blinking blue light indicates pairing mode.
- Blinking yellow light indicates low battery.
- Red light indicates charging.

Cleaning Instructions for Really Hot Tooth Keyboard:

- Clean the keyboard surface by wiping, brushing, spraying or dipping it. Use only rags, sponges or soft bristle brushes. **DO NOT SUBMERGED THE KEYBOARD MINI USB CONNECTOR INTO CLEANING FLUID.**
- The rubber of Really Hot Tooth can be cleaned with water, soap, alcohol, 10% bleach solutions, and a variety of chemical disinfectants. **DO NOT use petroleum based cleaners, acetone, over 10% bleach solutions, temperature or pressure sterilization, buffing pads or scrubbing pads**

Charging the Really Hot Tooth Keyboard:

- Use the Mini USB cable (included) to charge the keyboard. Plug the USB "A" end to your PC and the mini USB "B" end to the USB Charging port connector on the keyboard shown below.
- It takes approximately 2 hours to fully charge the battery.

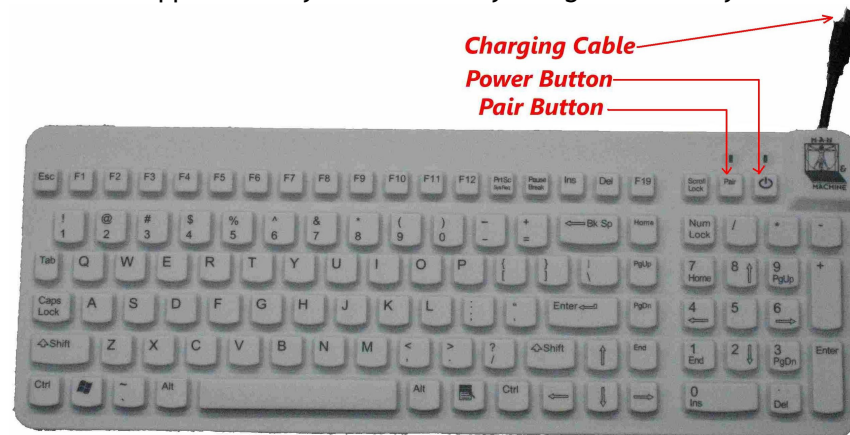

THESE INSTRUCTIONS AND RECOMMENDATIONS HAVE BEEN PREPARED TO ADVISE THE PROPER METHODS FOR CLEANING YOUR PRODUCT. MAN & MACHINE, INC. OR THE LOCAL DISTRIBUTOR CANNOT ASSUME ANY RESPONSIBILITY FOR THE APPLICATION OF THEM. IF THERE ARE ANY QUESTIONS, PLEASE CONTACT PLACE OF PURCHASE OR MMI PRIOR TO CLEANING. MAN & MACHINE DOES NOT CONSIDER THE REALLY HOT TOOTH KEYBOARD TO BE A MEDICAL KEYBOARD FOR INFECTION CONTROL PURPOSES DUE TO THE INABILITY TO MECHANICALLY CLEAN ALL SURFACES AND AREAS ON THE KEYBOARD. ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

You can email us at: info@mmimd.com
or call us at: (301) 341-4900
In Europe, contact +31-23-5450185
www.man-machine.com
Copyright Man & Machine, Inc. 2010

